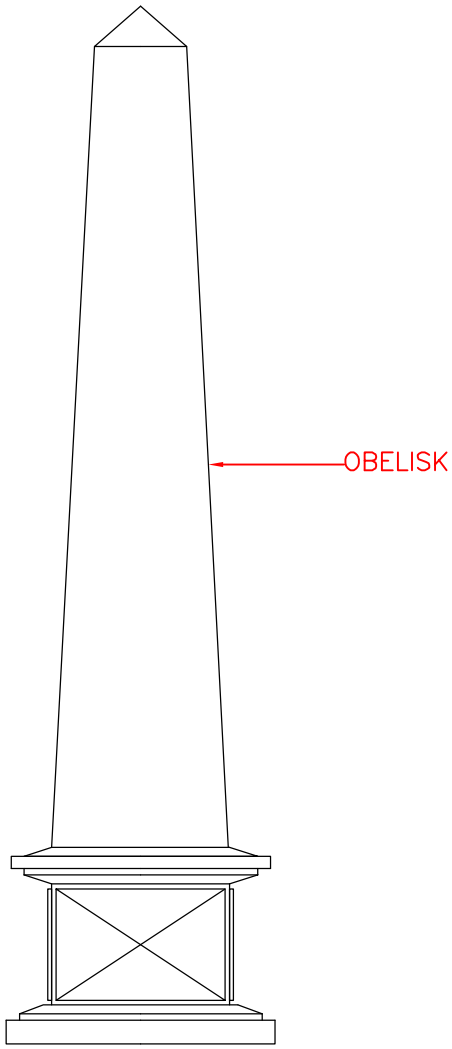

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

UNPACK THE ORNAMENT

UNPACK THE BOX, YOU SHOULD HAVE RECEIVED A OBELISK IN THE PACKAGE.

ASSEMBLE THE ORNAMENT

1. TURN OVER OBELISK, THEN REMOVE RUBBER STOPPLE FROM BOTTOM OF THE OBELISK.

2. FILL THE OBELISK WITH SOME SAND FROM BOTTOM OF IT TO ADD WEIGHT.

3. REPLACE THE RUBBER STOPPLE TO BOTTOM OF THE OBELISK.

4. TURN OVER THE OBELISK AND PLACE IT ON A FLAT SURFACE.